Atec XFM070



Owner's Manual_V1.0



Important Safety Instructions

The device repair must be done by qualified specialists only.

Do not expose this product to direct sunlight, heat or humid conditions. Please use a sun shade outdoors if necessary.

WARNING! To avoid possible malfunctions the device must not be exposed to rain or moisture. Prevent water or other liquids from getting inside the device.

Do not use any damaged or leaking batteries and please replace the battery immediately if its working life becomes significantly short

Keep away from strong light while using this product so as to obtain the clearest and the most colorful picture.

Please use the supplied power sources.

Do not use chemical solutions to clean this unit. Simply wipe with a clean soft cloth to remove fingerprints or smudges.

Please avoid heavy impact or drop on the ground.

Please do not cover the vents and holes on the device to ensure good ventilation. Otherwise it will lead to overheating and reduces the service life.

FCC (Federal Communications Commission)

This equipment has been tested and found to comply with the limits for class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interface when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential to correct the interference at his own expense

CAUTION: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.





1. Overview

Thank you for purchasing the AVtec XFM070 Full HD On-camera monitor. This 7" color LCD monitor is a great tool for focusing, composing, and viewing images/video clips directly from your digital camera/video camera. It has advanced integrated digital signal processing circuits and a IPS LED Panel which makes it high brightness with low power consumption, stable performance and low radiation. It is conveniently sized for easy transportation, and it is perfect for difficult shooting situations. To obtain the best results with your new XFM070, please take the time to read this manual.

2. Features

- Ultra Thin 7" IPS LCD Panel in Aluminum housing
- 3840×2160p (30/29.97/25/24/23.98 Hz), 4096×2160p (24Hz)
- 1920x1080 HD screen, PAL/NTSC color system
- Supports 4K UHD HDMI input
- Built-in speaker & integrated jack port for headphones
- Firmware upgradable through USB
- Supports a variety of battery types (F970/ LP-E6/ U60)
- AC/DC Adapter with EU, UK, US & AU plugs included
- Detachable sun hood attachment & foldable sun hood
- Four assignable function buttons
- Focus Assist, Center Marker, Safe Frames, Check Field
- Image Freeze, Image Flip & Pixel-to-Pixel
- Histogram, Exposure (Zebras) & False Colors
- Analog stereo L/R, Embedded Audio Display
- Image Zoom function, Image Nine Grid and Anamorphic Mode
- Brightness, Contrast, Tint, Saturation and Color Temperature adjust



3. Included in this box

1x AVtec XFM070 Full HD Monitor 3x Battery bracket for NP-F, BP-U & LP-E6 batteries 1x AC/DC Combi adapter with EU, US, UK & AU plugs 1x Sun hood attachment & detachable sun hood 1x Ball head with 1/4" camera screw 1x HDMI cable







3.1 Battery brackets & AC/DC Adapter

Battery brackets

The battery bracket for Sony NP-F batteries is installed on the monitor. You can easily change the battery bracket by unscrewing the 4 small screws on the back of the battery bracket. Unplug the bracket connector from the slot, plug in the connector of the bracket you would like to install and fasten the 4 screws.

The following table will give you an idea which brackets you are able to use for the Sony and Canon battery types.

| Item: | For use with: |
|---------------|--|
| NP-F bracket | Sony NP-F970, NP-F960, NP-F950, NP-F930, NP-F770, NP- F750, NP-F730, NP-F570, NP-F550, NP-F530, NP-QM91D, NP-QM91, NP-QM90D, NP-QM90, NP-QM71D, NP-QM71, NP-QM70D, NP-QM70, NP-QM51D, NP-QM51, NP-FM71 & NP-FM70 series. |
| BP-U bracket | Sony BP-U30, BP-U60 & BP-U90 |
| LP-E6 bracket | Canon LP-E6 |

NOTE: Please remove the battery from the bracket before changing the battery bracket itself.



AC/DC Combi adapter

The supplied AC/DC combi adapter (100-240V~) supports AC or DC power and uses wall, vehicle, or airplane power outlets to power your device. Four power plugs are supplied for EU, US, UK and AU. Slide the selected plug on to the adapter until you hear a soft click.





3.2 Other included accessories

Sun hood

The firm but flexible plastic sun hood is designed to protect your screen and reduces strong light reflection. It mounts to the monitor with a strong easy-on-easy-off construction with hook and loop fasteners.



Ball head

The ball and socket joint of the supplied ball head allows movement on all axes at the same time and has a single locking screw for easy fixation to your device. Slide the ball head into a hot shoe and fasten it by turning the wheel on the bottom of the ball head to the right.





4. Front panel & Controls



| Item: | Description: |
|-------|--|
| 1 | Power Indicator light |
| | when power on/standby, it turns red; when signal in, it turns green. |
| 2 | $ \bigcirc $ Power on/off button |
| 3 | F4 Function button, enter secondary menu item F (self-defined button), then self-define the function that user need |
| 4 | F3 Function button enter secondary menu item F (self-defined button), then self-define the function that user need |
| 5 | ▲/F2 Menu control button / F2: Function button to navigate into the menu or when not in menu for use of function button |
| 6 | ▼/F1 Menu control button / F1: Function button |
| | to navigate into the menu or when not in menu for use of function button |
| 7 | MENU To enter or exit the menu |
| 8 | Volume up / increase the value of selected menu item |
| 9 | Volume down / decrease the value of selected menu item |
| 10 | MODE To switch signal mode |
| 11 | LCD display |



5. Rear panel



| Item: | Description: |
|-------|----------------------|
| 1 | USB Upgrade port |
| 2 | OSD Controller port |
| 3 | Headphone Jack port |
| 4 | AV port |
| 5 | HDMI-in port |
| 6 | DC Power input (12V) |
| 7 | Battery Bracket |
| 8 | Built-in speaker |



6. Operation instructions

After correctly connecting to the power supply, the indicator will turn (Red),

press ^U to turn on monitor power, the indicator will be Yellow, and then input AV or HDMI signals, the indicator will turn from Yellow to Green.

1. Press **MENU** button in the front of the panel to enter the main menu, and press ◄ or ► button to go through the contents of the menu and secondary menu functions.



Then press ▼/F1 button to enter secondary menu (cursor moves to secondary menu position). If you need to go through or select the items in the secondary menu, then press ▼/F1 or ▲/F2 button to move the cursor.

| | \triangle | |
|-------------|-------------|--|
| Pic. Mode | User | |
| Brightness | 50 | |
| Contrast | 50 | |
| Saturation | 50 | |
| Sharpness | 0 | |
| Color Temp. | User | |
| Red | 128 | |
| Green | 128 | |
| | ∇ | |

- 3. After selecting the items in the secondary menu, then press ◀ or ► button to adjust the item parameters.
- 4. Press ▼/F1 or ▲/F2 button to choose another parameter adjustment after confirming the item adjustment.
- 5. Press **MENU** button to exit the menu.



7. Menu instructions

📧 Image Color menu

Use one of the \checkmark /F1 button to enter the Image Color menu. Press \blacktriangle /F2 or \checkmark /F1 to navigate through the settings. Once the desired setting is highlighted, use the \blacktriangleleft or \triangleright buttons to navigate through the sub-menu functions. Press the MENU button to activate the function.

| • | | 6 |
|-------------|------------------|---|
| Pic. Mode | Δ User | |
| Brightness | 50 | |
| Contrast | 50 | |
| Saturation | 50 | |
| Sharpness | 0 | |
| Color Temp. | User | |
| Red | 128 | |
| Green | 128 | |
| | V | |



| Menu item: | Description: |
|-------------|---|
| Pic. Mode | Standard, Dynamic, Mild, User Select "user" to adjust the image of Brightness, |
| | Contrast, Saturation, Sharpness" according to the practical situation. |
| Brightness | To adjust the monitors brightness. |
| Contrast | To adjust the contrast. |
| Saturation | To adjust color concentration. |
| Sharpness | Also called "Resolution", an indicator for the image plane definition and image edge sharpness. |
| Color Temp. | 6500 K, 9300 K or User. The User option allows you to adjust Red, Green & Blue. |
| Tint | On NTSC video mode, the image color tint difference is adjusted by tint. |



Settings menu

Use one of the \checkmark /F1 button to enter the Settings menu. Press \blacktriangle /F2 or \checkmark /F1 to navigate through the settings. Once the desired setting is highlighted, use the \triangleleft or \triangleright buttons to navigate through the sub-menu functions. Press the MENU button to activate the function.

| 😞 🚷 | | | 🏷 🛞 |
|---|--|---|------------------------------|
| Language Aspect Ratio No signal OSD Trans. OSD H OSD V | △ English 16:9 Blue Screen Off 50 50 | OSD Time U/D Zoom L/R Zoom Backlight Power On | Off 0 0 90 Auto. |
| Camera Mode Zoom All | 0 0 0 ▽ | USB Upgrade Reset | \bigtriangledown |

| Menu item: | Description: |
|--------------|---|
| Language | To change the menu language. |
| Aspect Ratio | To change the display ratio to: Panorama, Automatic, Just Scan, Zoom 1, Zoom 2, 16:9, 4:3. |
| No Signal | To select screen color when no signal. Black (recommended), White, Red, Green or Blue Screen. |
| OSD Trans. | Menu transparency. Off, Low, Medium or High. |
| OSD H | To adjust the horizontal position of the menu. |
| OSD V | To adjust the vertical position of the menu. |
| Camera Mode | Mode Off, 480p, 1080i |
| Zoom All | Image Zoom. Use ◀ or ► to zoom. |
| OSD Time | Adjust the menu time. Off, 10s, 20s, 30s |
| U/D Zoom | Use ◀ or ▶, to adjust the proportion of the image Up and Down to Zoom In or Zoom Out. |
| L/R Zoom | Use ◀ or ▶, to adjust the proportion of the image Left and Right to Zoom In or Zoom Out. |
| Backlight | To adjust the brightness of screen backlight |
| Power On | Manual or Auto setting |
| USB Upgrade | To update the firmware via USB. Please check the firmware page on <u>AVtec.tv</u> . |
| Reset | Restore factory settings by pressing ► button. |



Eunction menu

Use one of the \checkmark /F1 button to enter the Function menu. Press \blacktriangle /F2 or \checkmark /F1 to navigate through the settings. Once the desired setting is highlighted, use the \triangleleft or \triangleright buttons to navigate through the sub-menu functions. Press the MENU button to activate the function.

| 8 | * | 6 | | * | 6 |
|---|--|---|---|--|---|
| Center Marker Safe Frames Image Freeze Image Flip Check Field P2P Histogram False Colors | Off Off Off Off Off Off Off Off | | Zoom Anamorphic Focus Assist Peaking Color Over Exposure Exposure Lever Embedded Audio Nine Grid | △ Off Off Red Off 93 IRE Off Off ✓ | |





| Menu Item: | Description: |
|--|---|
| Center Marker | To set center mark (cross mark) display. |
| Safe Frames | To select screen markers; 96%, 93%, 90%, 85%, 80%, 2.35:1 or Off. |
| Image Freeze | To capture the current picture. |
| Image Flip | Flip the image, horizontally, vertically or in both directions. |
| Check Field | Color overlay; Red, Green, Blue, Mono or Off. |
| P2P (Pixel-to-Pixel) (Not in 4K mode) | The display mode that made the resolution of the image consistent with display of the physical resolution. |
| Histogram | Turns on the Histogram in the right corner of the screen. To check the picture brightness. |
| False Colors | Turns on False Colors to show scene lighting levels. Red areas are overexposed, blue areas are insufficient lighting, green areas are good lighting levels. |
| Zoom (Not in 4K mode) | Image zoom settings; Off, 4x, 9x, 16x |
| Anamorphic (Not in 4K mode) | Restore the real proportions of the scene; Off, 1.3x, 2.0x, 2.0x MAG |
| Focus Assist | Turns on the Focus Assist function that makes it easier to focus. |
| Peaking Color | The edge line color can be chosen according to the situation; Red, Green and Blue |
| Exposure (Zebras) | Over Exposure can be turned On and Off. Shows red stripes to check what is overexposed. Settings from 1~100 IRE |
| Embedded Audio | The audio meter is green, and will turn yellow when it exceeds -20dB, and turn red when it exceeds -9dB. |
| Nine Grid (Not in 4K mode) | Open it to set the image Nine Grid and select ◀ or ► button to choose an image, and then press ▼/F1 or ▲/F2 button to zoom the image to full screen, press MENU button to exit. |
| Ratio Marker (Not in 4K mode) | Image display ratio marker; Off, 4:3, 13:9, 14:9, 15:9, 16:9, 1.85:1, 2.35:1 |
| Marker Color | To select the above high contrast mark color according to different image; Red, Green, Blue, Black, White. |
| Mark Width | To select the above mark color display width; 1~7 |
| Modified Marker | Adjust the brightness of the image outside tag line to highlight the inside tag line of the image; 0~6 |



Custom Buttons Setting

Use one of the \checkmark /F1 button to enter the Function buttons menu. Press \blacktriangle /F2 or \checkmark /F1 to navigate through the settings. Once the desired setting is highlighted, use the \triangleleft or \triangleright buttons to navigate through the sub-menu functions. Press the MENU button to activate the function to save it under the specific function button.



| Menu Item: | Description: |
|--------------|--|
| F1 F2 F3 F4 | To set the 4 shortcut custom buttons on the front panel; Center Marker, Safe Frames, Check Field, Focus Assist, Aspect Ratio, Camera Mode, Image Flip, P2P, Image Freeze, Histogram, False Colors, Over Exposure, Embedded Audio, Nine Grid, Zoom, Anamorphic |
| For example: | When in menu " P", press ▼/F1 button and then select F1, press ► button to pop-up function items and select one of them, such as "Focus Assist", and press MENU button to confirm. So when you exit OSD menu, you could press F1 directly on the front of panel to turn on "Focus Assist" function. Same settings for F2, F3 and F4 |



8. Technical Specifications

| Panel Size | 7.0 inch |
|---------------------|---|
| Panel Type | IPS LCD |
| Resolution | 1920x1080 |
| Backlight | LED |
| Dot Pitch | 0.07875 (W) x 0.07875 (H) mm |
| Aspect Ratio | 16:9 |
| Brightness | 450cd/m2 |
| Contrast Ratio | 1200:1 |
| Viewing Angle | 80°/80° (Left/Right) 80°/80° (Up/Down) |
| Input Signal | Video / Audio / HDMI |
| Video Color System | NTSC 3.58 / PAL 4.43 |
| HDMI Support Format | 480i /480p /576i /576p |
| | 720p (60/59.94/50/30/29/25/24/23.98) |
| | 1080i (60/59.94/50) |
| | 1080p |
| | (60/59.94/50/30/29.97/25/24/24sF/23.98/23.98sF) |
| | 4K UHD 3840x2160p (30/29.97/25/24/23.98 Hz) |
| | 4096x2160p (24 Hz) |
| Headphone Output | Stereo 3.5mm |
| Input Voltage | DC:7.4~24V |
| Power Consumption | ≦8W |
| Unit Size (LxWxH) | 180 x 140 x 17 mm |
| | 7.09 x 5.51 x 0.67 inch |
| Unit Weight | 490/520g (with F970 battery plate) 17.28/18.34 oz |
| Installation Method | 1/4 inch bracket screw hole, can be easily connected to the hot shoe mount, tripod fixed installation |
| Working Temperature | -20°C~55°C / -4°F~131°F |
| Storage Temperature | -30°C~65°C / -22°F~149°F |
| otorage remperature | |



9. Trouble shooting

Problem 1. Only black and white or monochrome picture:

① Check saturation, brightness & contrast adjustment.

(2) Check if "Check Field" is in black and white or monochrome image or other condition.

Problem 2. No Image after switching on power

① Check if signal cable connections are in good condition and whether the monitor is synchronized with the input signal, then press the **MODE** button and try again.

(2) Check signal cable connection and make sure to use the standard adapter to connect the monitor. If power is supplied by battery, please check if the battery is fully charged.

3. No sound

① Check Volume control; press the volume button, and try to increase the volume.

(2) Check the AUDIO input and ensure there is AUDIO signal.

If other issues with the device may occur, please contact us.

Vtec **LCD Monitors** http://www.AVtec.tv